
 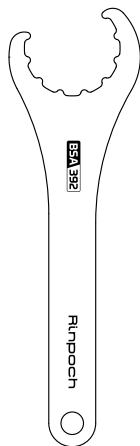


RC3230


Rinpoch

Please use the **Rinpoch BSA392 tool** for proper installation and removal of **Rinpoch BSA392** threaded external bearing cups.

Bottom Bracket Cup




Rinpoch BSA392 tool
is not include in this package

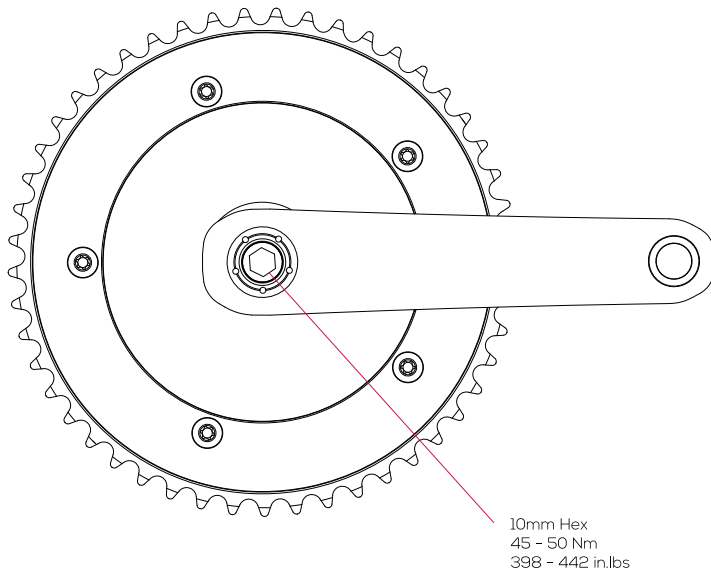

10mm Hex
45 - 50 Nm
398 - 442 in.lbs

RC3230

Rinpoch

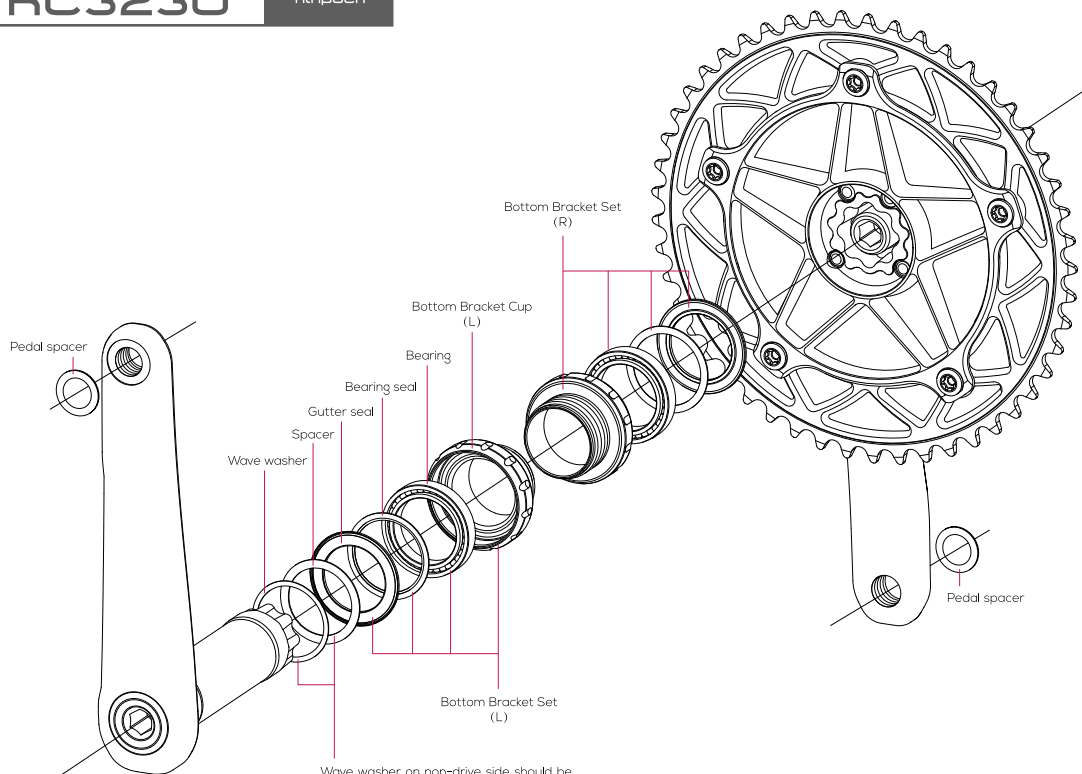

Wave washer on non-drive side should be compressed but not flattened when crank bolt is at full torque. Adjustments to the number of spacers used may be required.